


## Installing the Havahart Replacement Door Flap

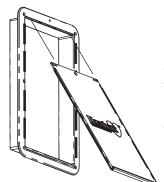

1. Slide the edge of the door flap with holes through the slot at the top of the interior door flange. Press holes in flap onto the posts in the door frame. The door flap logo should read correctly when seen from house interior. See figures 1 and 2.

Figure 1

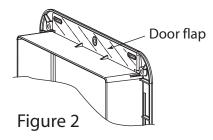

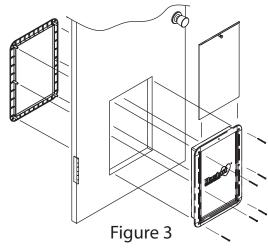

- 2. Place the frames into the opening as shown see figure 3. Note the frame with holes goes to the interior of the house. Squeeze the frames together so they are tight against door.
- 3. Insert screws and tighten until frames are flush with the door and they do not move when pushed on. DO NOT OVERTIGHTEN!

You are finished!

Look for other Havahart Caring Control solutions at:

www.havahart.com



69 N. Locust St. Lititz, PA 17543 800-800-1819 717-626-2125